


A Simple Method of Having Decent Looking Trailing Edges

This from an article in the Flying Aces Club News of September/October 2003, Col Lin Reichel, CinC, FAC

TRAILING EDGE TIPS


WANT TO HAVE UNIFORM TRAILING EDGE THICKNESS?
HERES A WAY TO GUARANTEE RESULTS

①

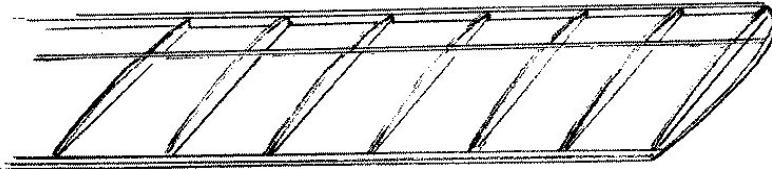

BUILD WING / STAB / RUDDER FRAME USING
RECTANGULAR T.E. STOCK. (SAY 3/32" X 3/8")

②

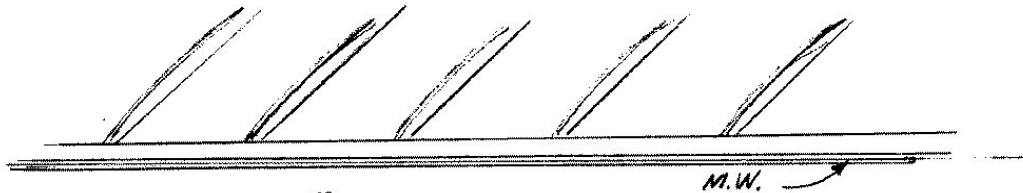

USING "DUCO" OR AMBROID CEMENT; "TACK-GLUE"
1/32" MUSIC WIRE TO BOTTOM EDGE OF T.E.

③



NOW SAND AWAY / BLEND RIBS / TRAILING EDGE
TO A UNIFORM THICKNESS (YOU CAN'T SAND THRU
MUSIC WIRE!) REMOVE THE M.W. AFTER SANDING
IS COMPLETE WITH ACETONE TO MELT AWAY THE
DUCO. VOILA! PERFECT T.E.'S !!